

# 4000# Jack Kit: Straight-Acting Jacks


**Application:** For front of 2008 Dodge Sprinter 3500 Chassis with V6 engine.

**Mfr. #:** AP40816 4000# Jack Kit

**Includes:** 1 - AP40856 4000# x 13" Stroke Right Hand Jack      1 - AP40793 Crosstie  
 1 - AP40857 4000# x 13" Stroke Left Hand Jack                      1 - AP40799 Hardware Kit

**M.S.R.P.:** See Item Price Listing

**NOTE: IF COACH HAS A STORAGE COMPARTMENT IN THE STEP WELL, IT MUST BE REMOVED. SEE MI15.2009 FOR DETAILED INFORMATION.**

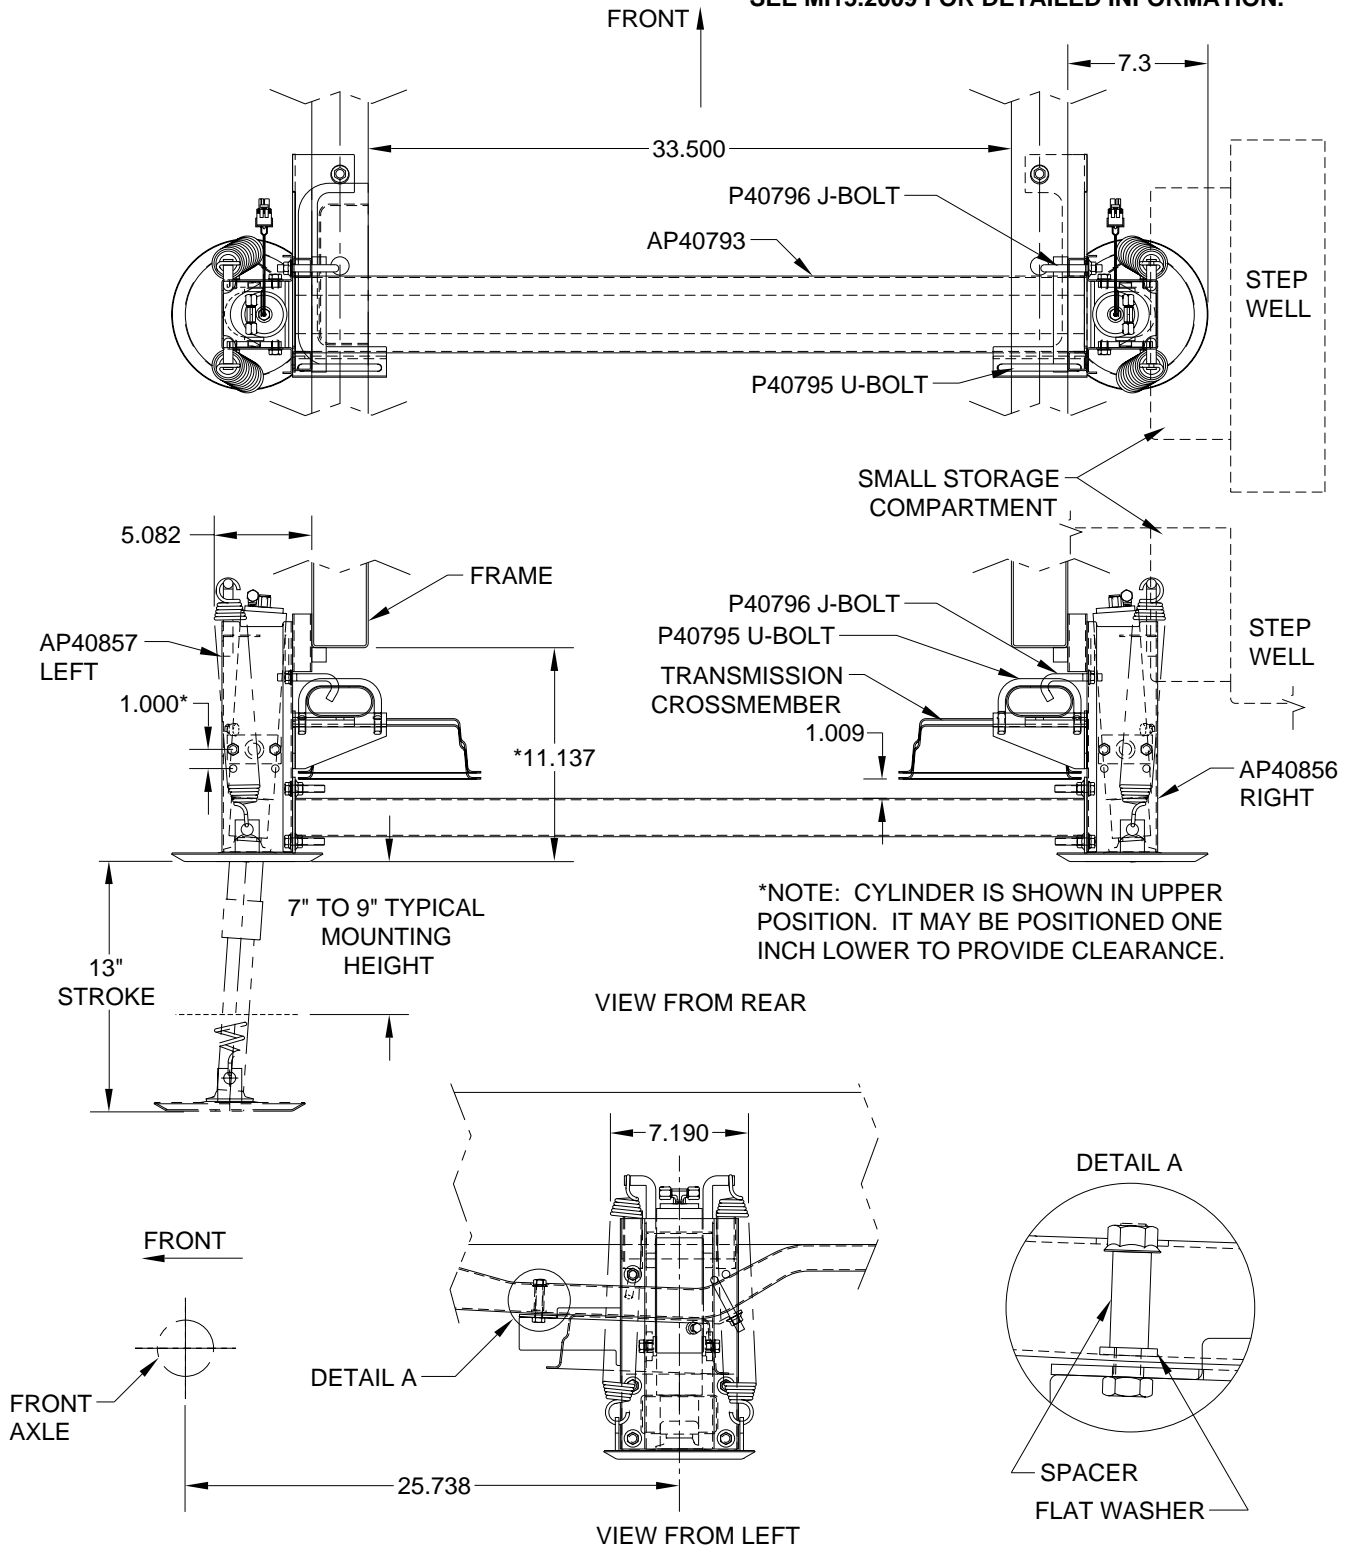

\*NOTE: CYLINDER IS SHOWN IN UPPER POSITION. IT MAY BE POSITIONED ONE INCH LOWER TO PROVIDE CLEARANCE.

NOTE: ALL DIMENSIONS ARE APPROXIMATE

**CAUTION:** Follow CAUTIONS in Operator's and Installation Manuals concerning working under vehicles.

MI25.1131  
01AUG07